KZ1000-R1 Wiring Diagram

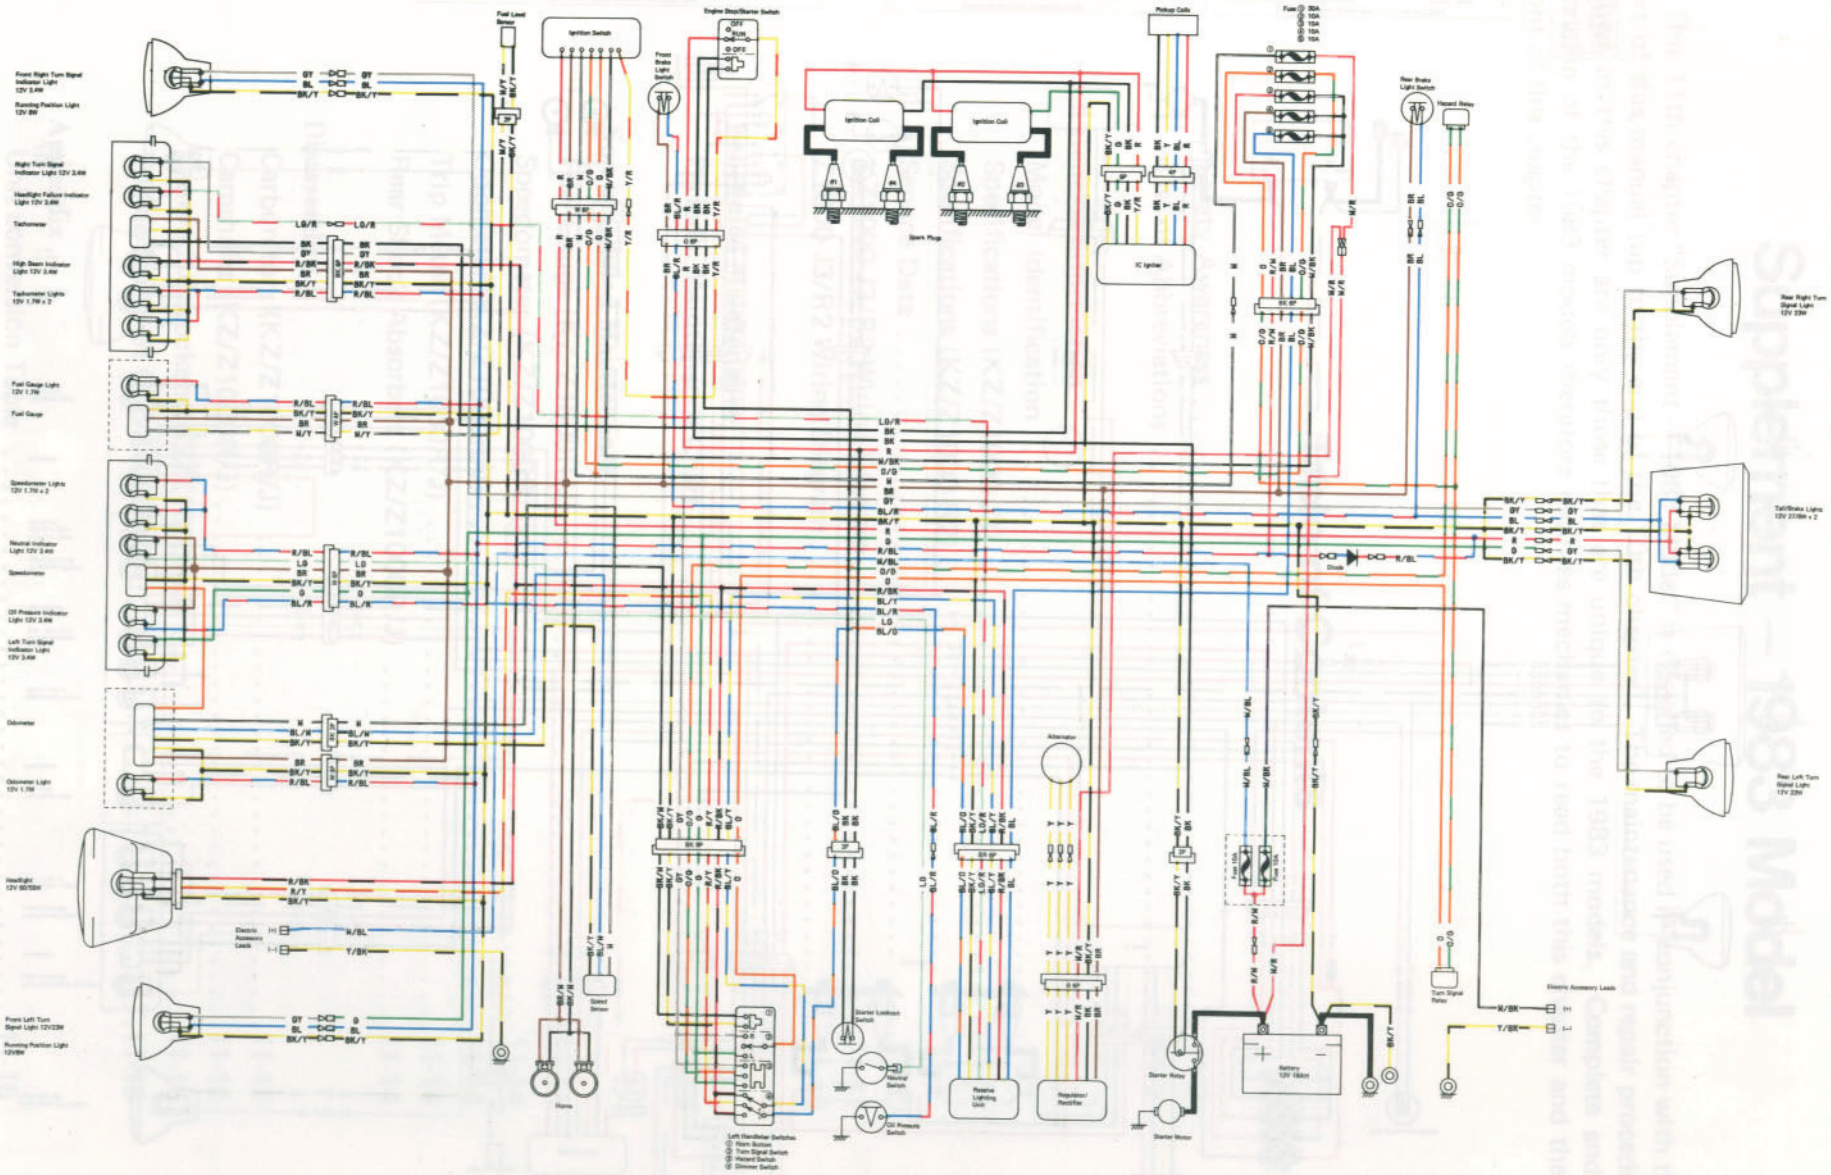

LEFT HANDLEBAR SWITCH CONNECTIONS																
Horn Button			Turn Signal Switch			Hazard Switch			Dimmer Switch							
Color	BK/W	BK/Y	Color	GY	O	G	Color	G	O/G	GY	Color	R/BK	BL/Y	W/Y	BL/O
PUSH			R				ON				HI				
			N												
			L			OFF					LO				

IGNITION SWITCH CONNECTIONS						
	Ignition	Battery 1	Tail 1	Tail 2	Battery 2	Tail 3	Tail 4
Color	W/BK	W	R	O/R	O	BR	Y/R
ON							
P(PARK)							
OFF							
LOCK							

(1814A)

RIGHT HANDLEBAR SWITCH CONNECTIONS			
Engine Stop/Starter Switch			
Color	Y/R	R	BK
OFF			
RUN			
PUSH with RUN			

Color Code	
BK	Black
BL	Blue
BR	Brown
G	Green
GY	Grey
LB	Light Blue
LG	Light Green
O	Orange
P	Pink
R	Red
W	White
Y	Yellow